

Quick Start Guide

Remote Control RX2


Street Crane does not take responsibility for incorrect installation or any frequency interference.

Chance of unintended machine movement on start up.
Ensure the machine is stopped for the entire duration of the assembly process.
Keep the work area free and wear protective clothing.


To maximize product life, it is essential to use original BT11K batteries.

1. Connect the power supply and the outputs according to the connection block diagram provided with the system.

The configuration of the radio node can last up to 1 minute.

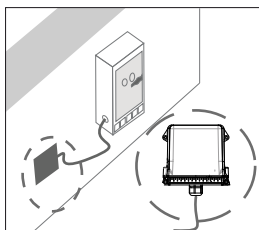


2. Ensure EEPROM is present and install batteries.

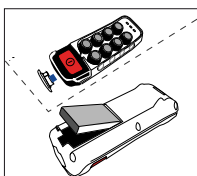


3. Push and pull out the STOP button.

The status LED will pulse blue until the stand by mode is reach, then it will turn into a continuous blue.

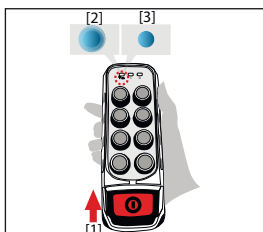


4. Press the start button.

The status LED will pulse green until the transmitter is linked with the receiver. The LED will turn into a continuous green when the receiver confirms the link.

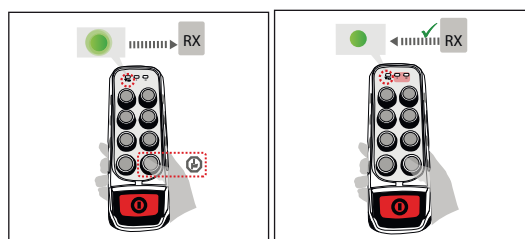


The system is now fully operational. If installed on a Street Crane then it will be necessary to press start again to energise the Crane / Hoist

Description

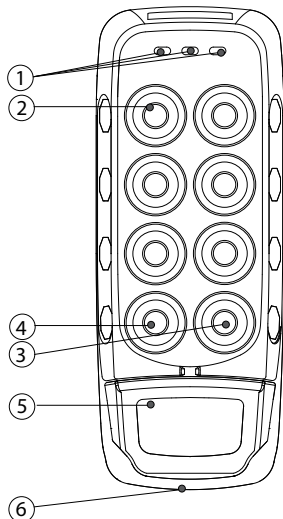

RX2 transmitter

1. LED
2. Maneuver button
3. Start button
4. Hoist selection
5. STOP button
6. Removable EEPROM


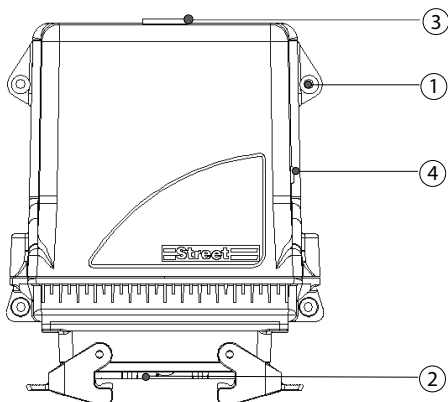


RX2 receiver

1. Fixing slots (fixed assembly or anti-vibration or anti-vibration with magnets)
2. 24 Pin Connector
3. Audible Alarm
4. LED Indicator

Hoist Selection

During the hoist selection, activating maneuvers is not allowed. Hoist selection can only be done in working mode.

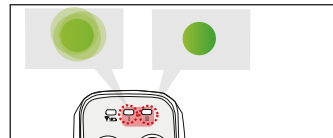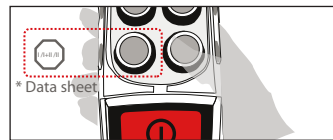

Hoist button and LEDs

[For more information, please consult the relevant User Manual.](#)